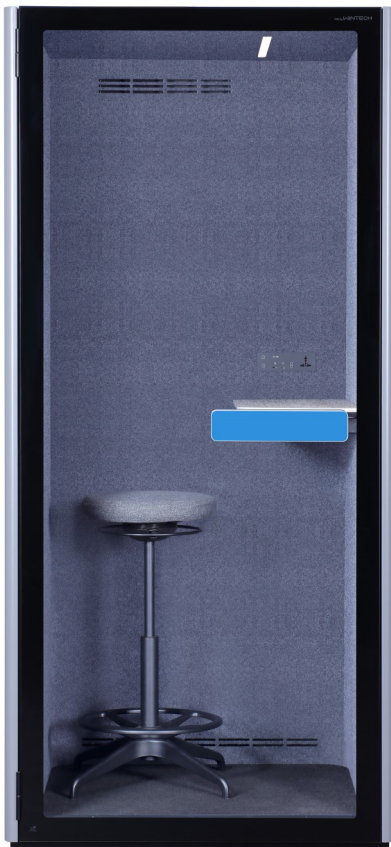# WORKSTATIONS.COM.AU

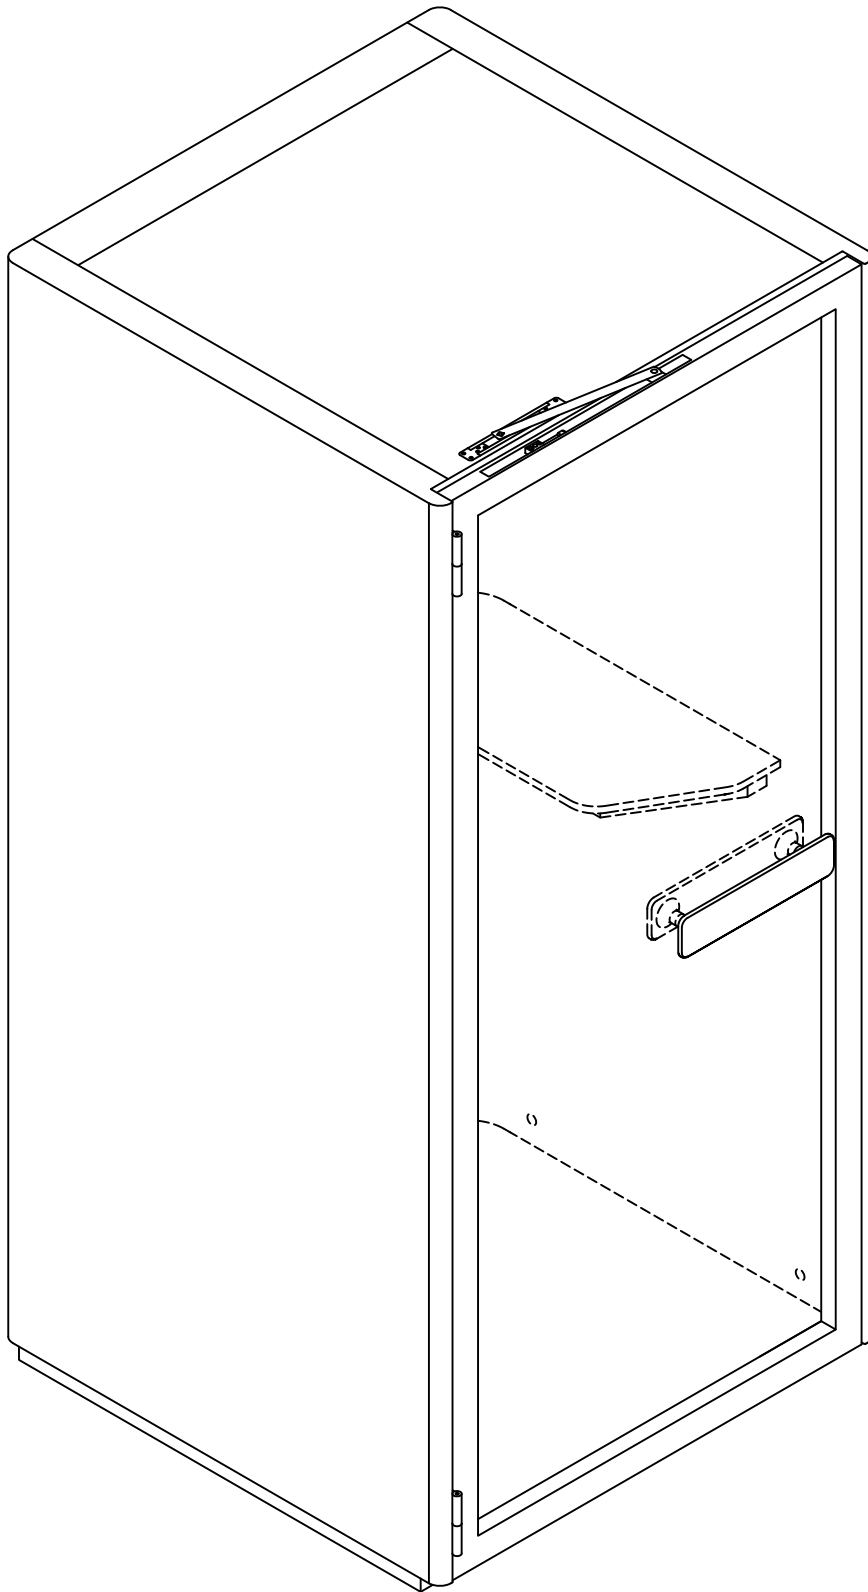# Office Pod Series

SERIES 2

ASSEMBLY DIAGRAM

SERIES 2—S-POD

SINGLE PERSON POD
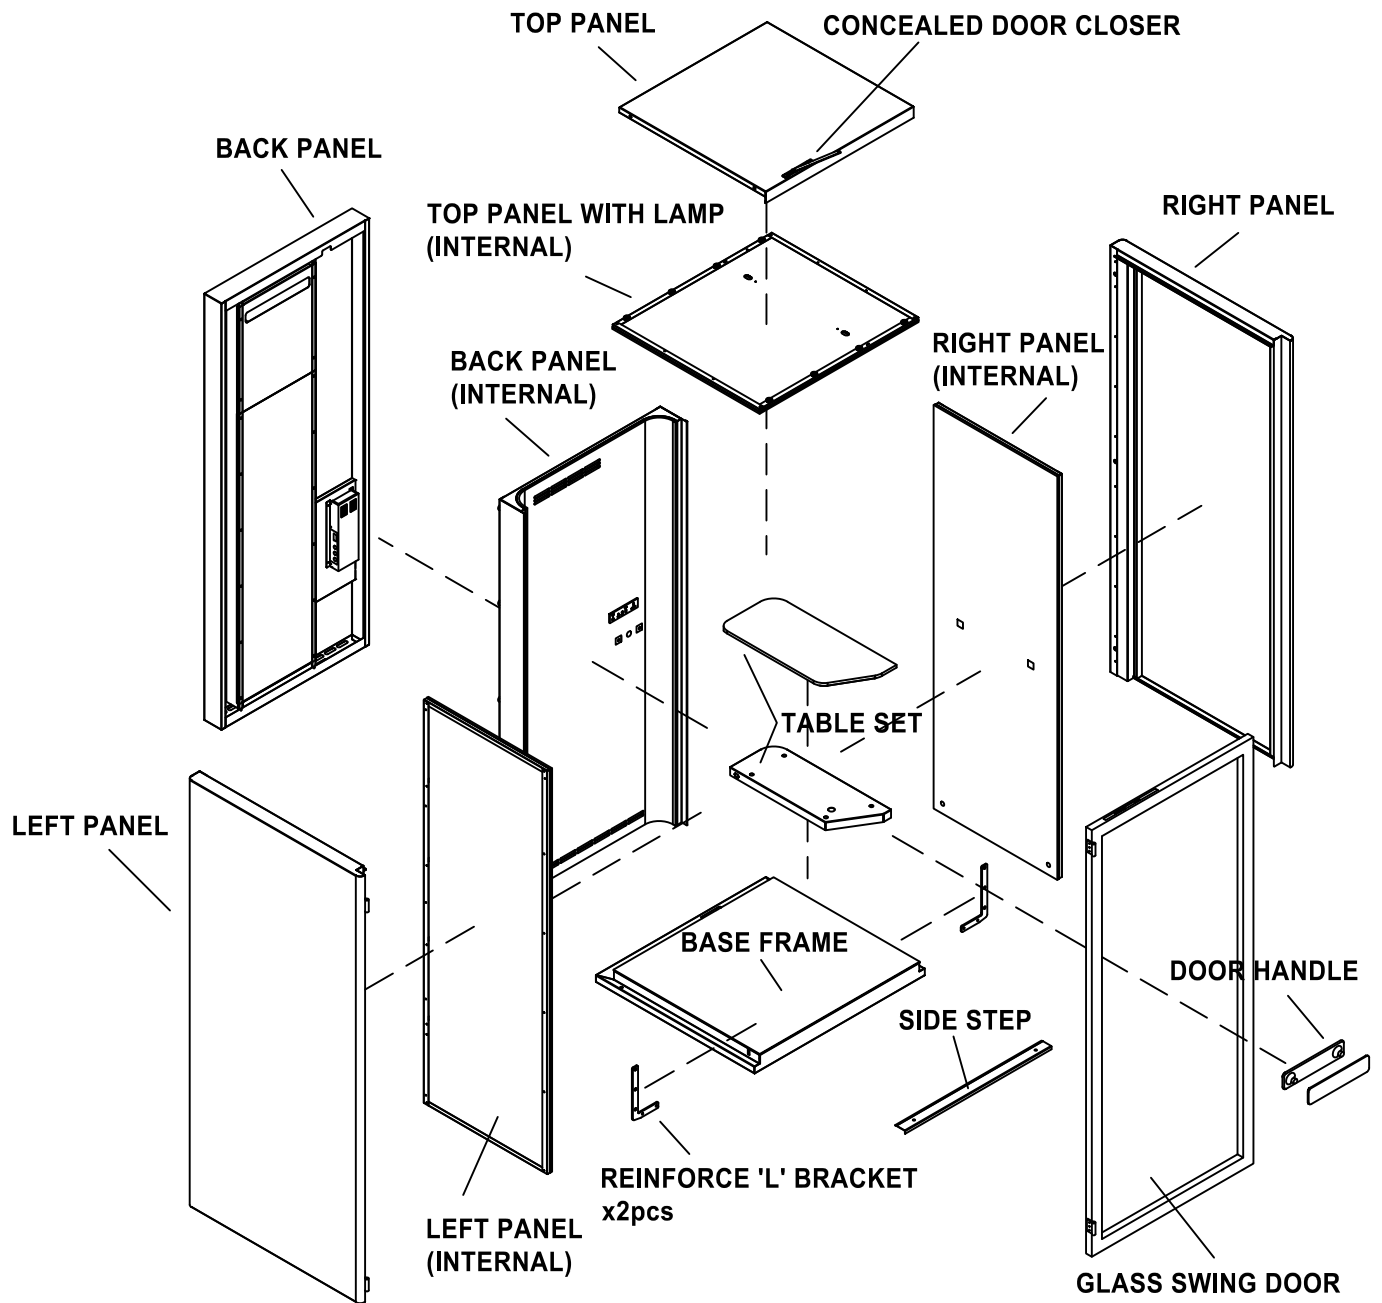
INSTALLATION MANUAL

S POD

⚠ **ATTENTION**

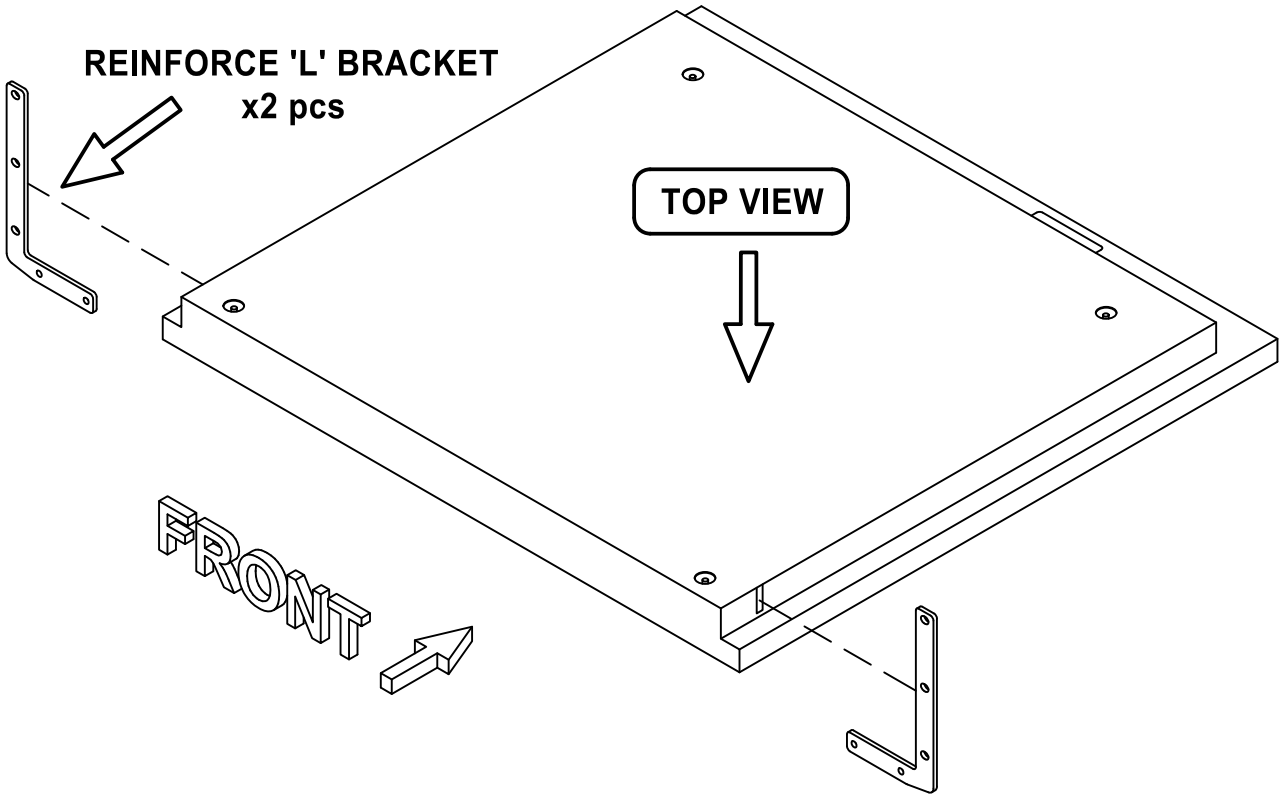**Please read installation manual carefully before assemble.**

First remove the accesory box. Carton number (1)
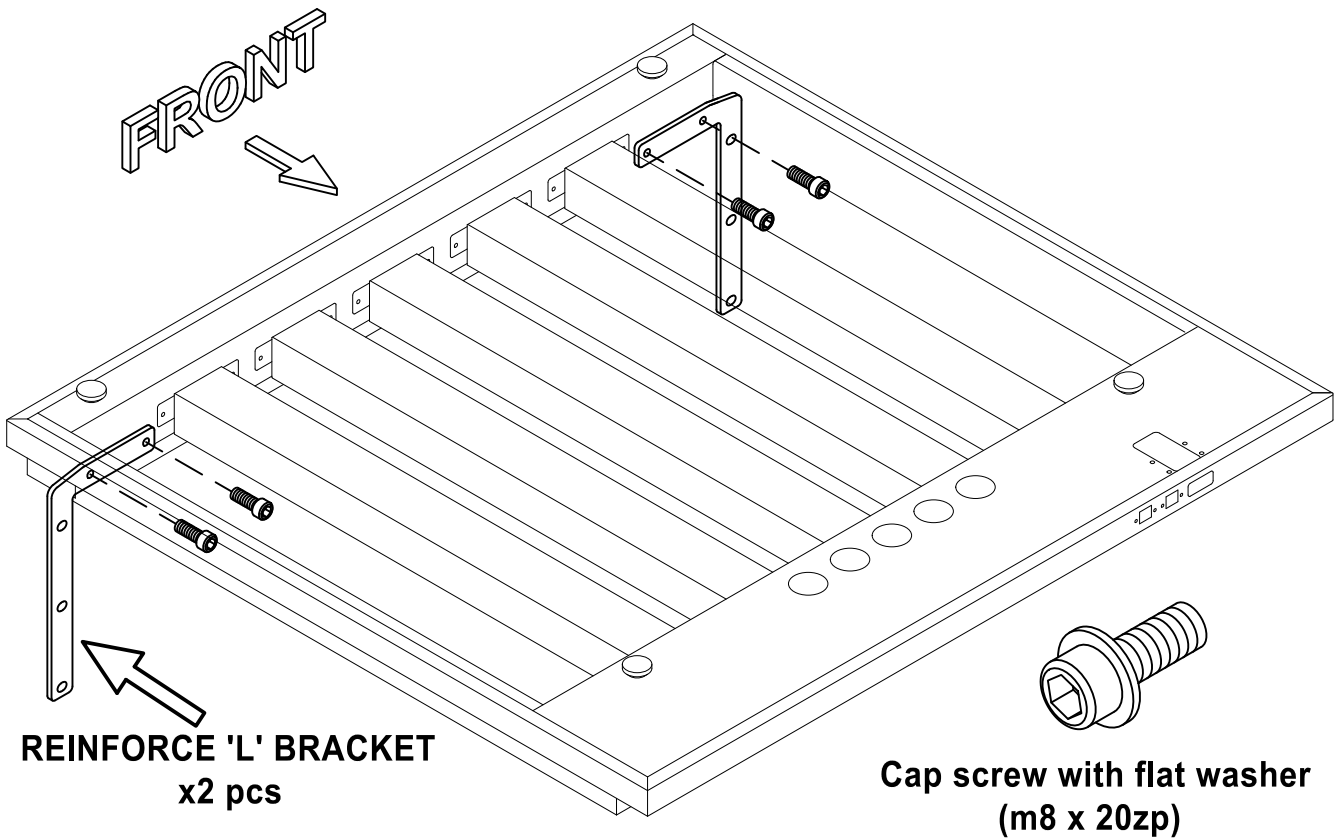
Follow the carton number when unboxing.

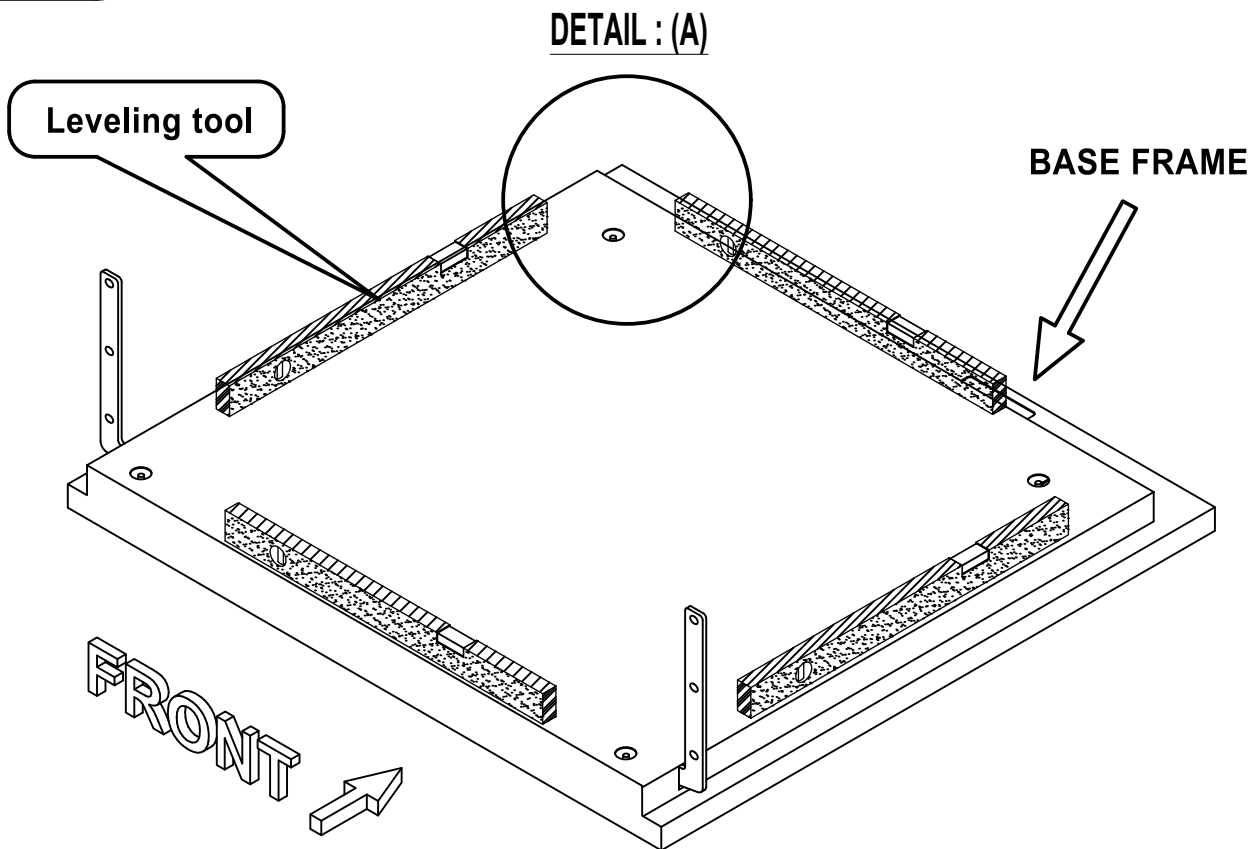**Complete assemble each according to the carton number and proceed to the next.**

TOP PANEL

CONCEALED DOOR CLOSER

BACK PANEL

TOP PANEL WITH LAMP
(INTERNAL)

RIGHT PANEL

BACK PANEL
(INTERNAL)

RIGHT PANEL
(INTERNAL)

TABLE SET

LEFT PANEL

DOOR HANDLE

BASE FRAME

SIDE STEP

REINFORCE 'L' BRACKET
x2pcs

LEFT PANEL
(INTERNAL)

GLASS SWING DOOR

1

REINFORCE 'L' BRACKET
x2 pcs

TOP VIEW

FRONT

BOTTOM VIEW

FRONT

REINFORCE 'L' BRACKET
x2 pcs

Cap screw with flat washer
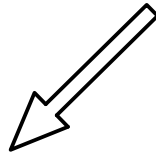**(m8 x 20zp)**

2

DETAIL : (A)

Leveling tool

BASE FRAME

FRONT

Step 1 ▭ Push to final position
before setting up the booth

Step 2 ▭ Adjustable foot cap for leveling

Step 3 ▭ Level the base before installation
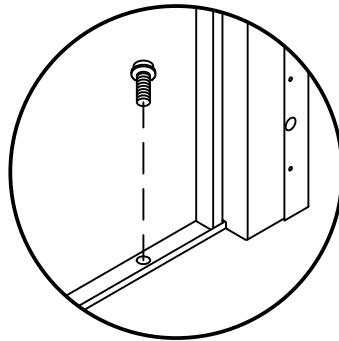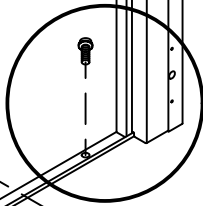
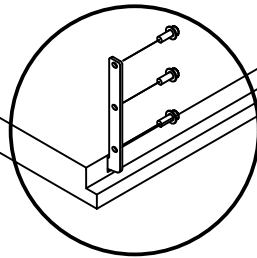Adjustable Foot Cap
x4 pcs
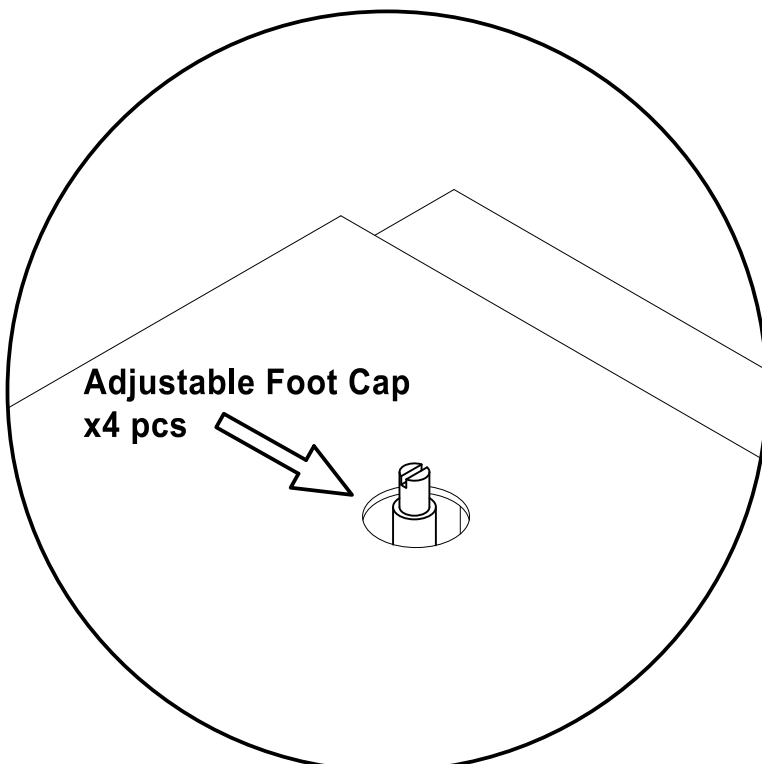
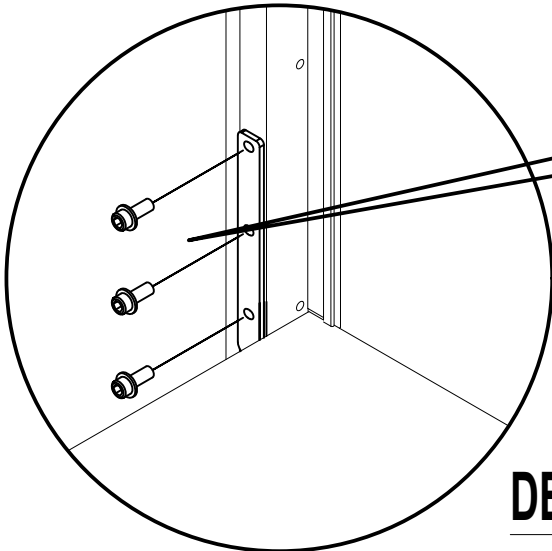DETAIL : (A)

3

LEFT PANEL
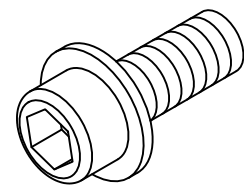
RIGHT PANEL

DETAIL : (B)

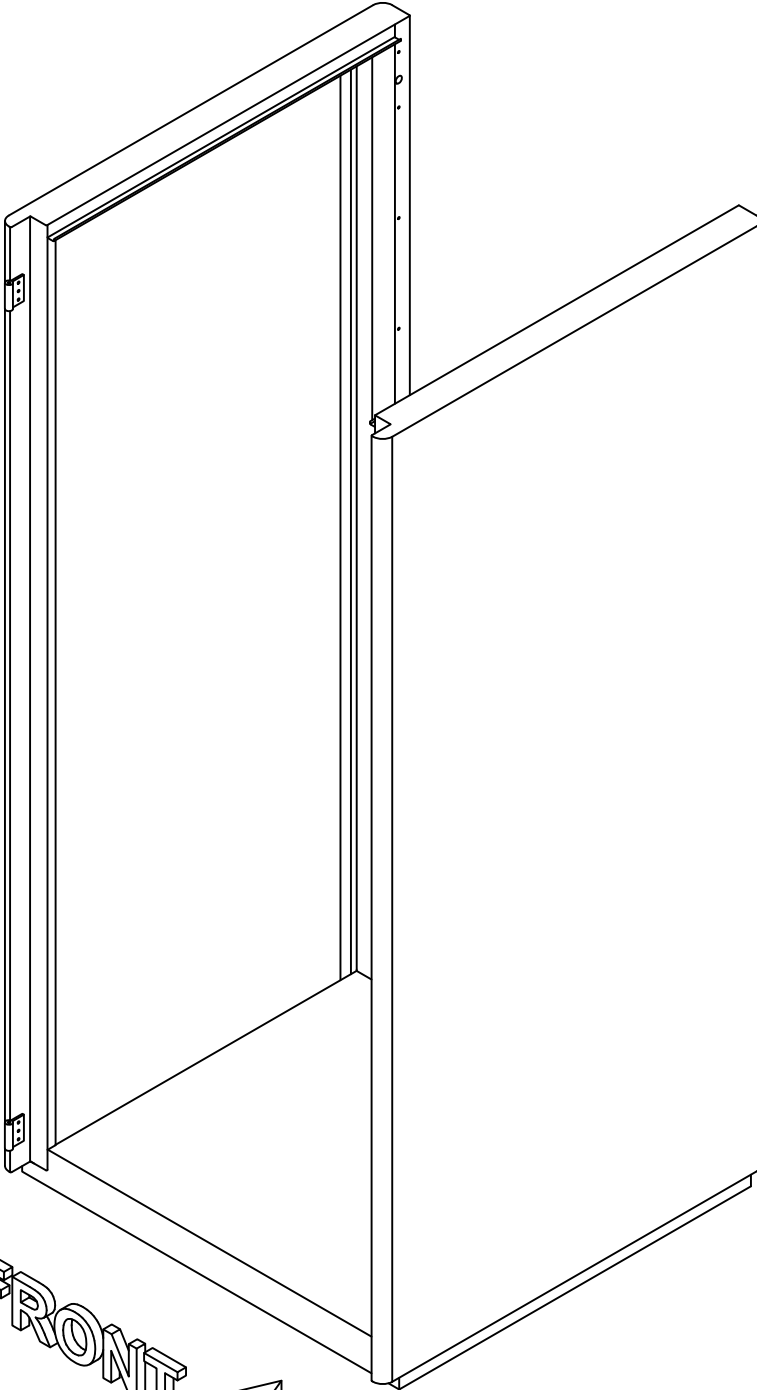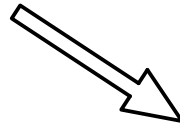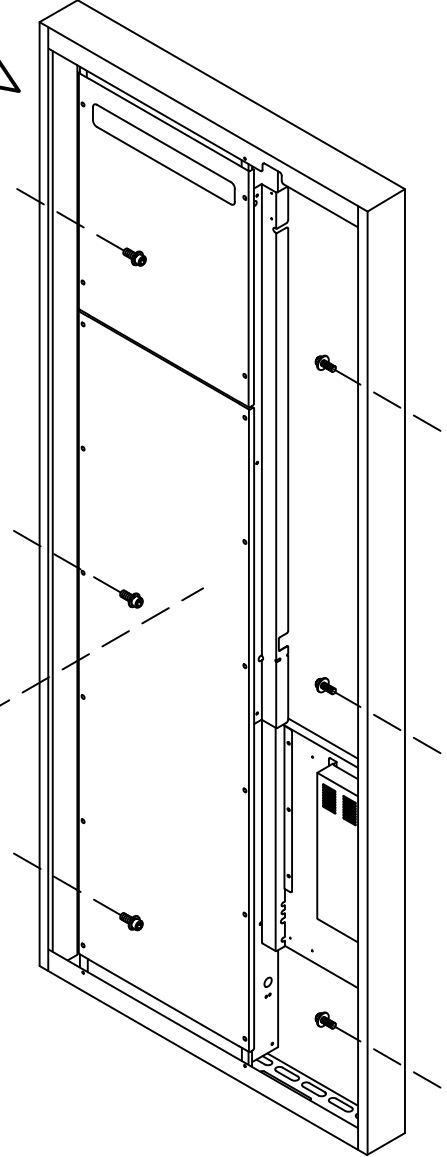DETAIL : (B)

DETAIL : (C)

FRONT
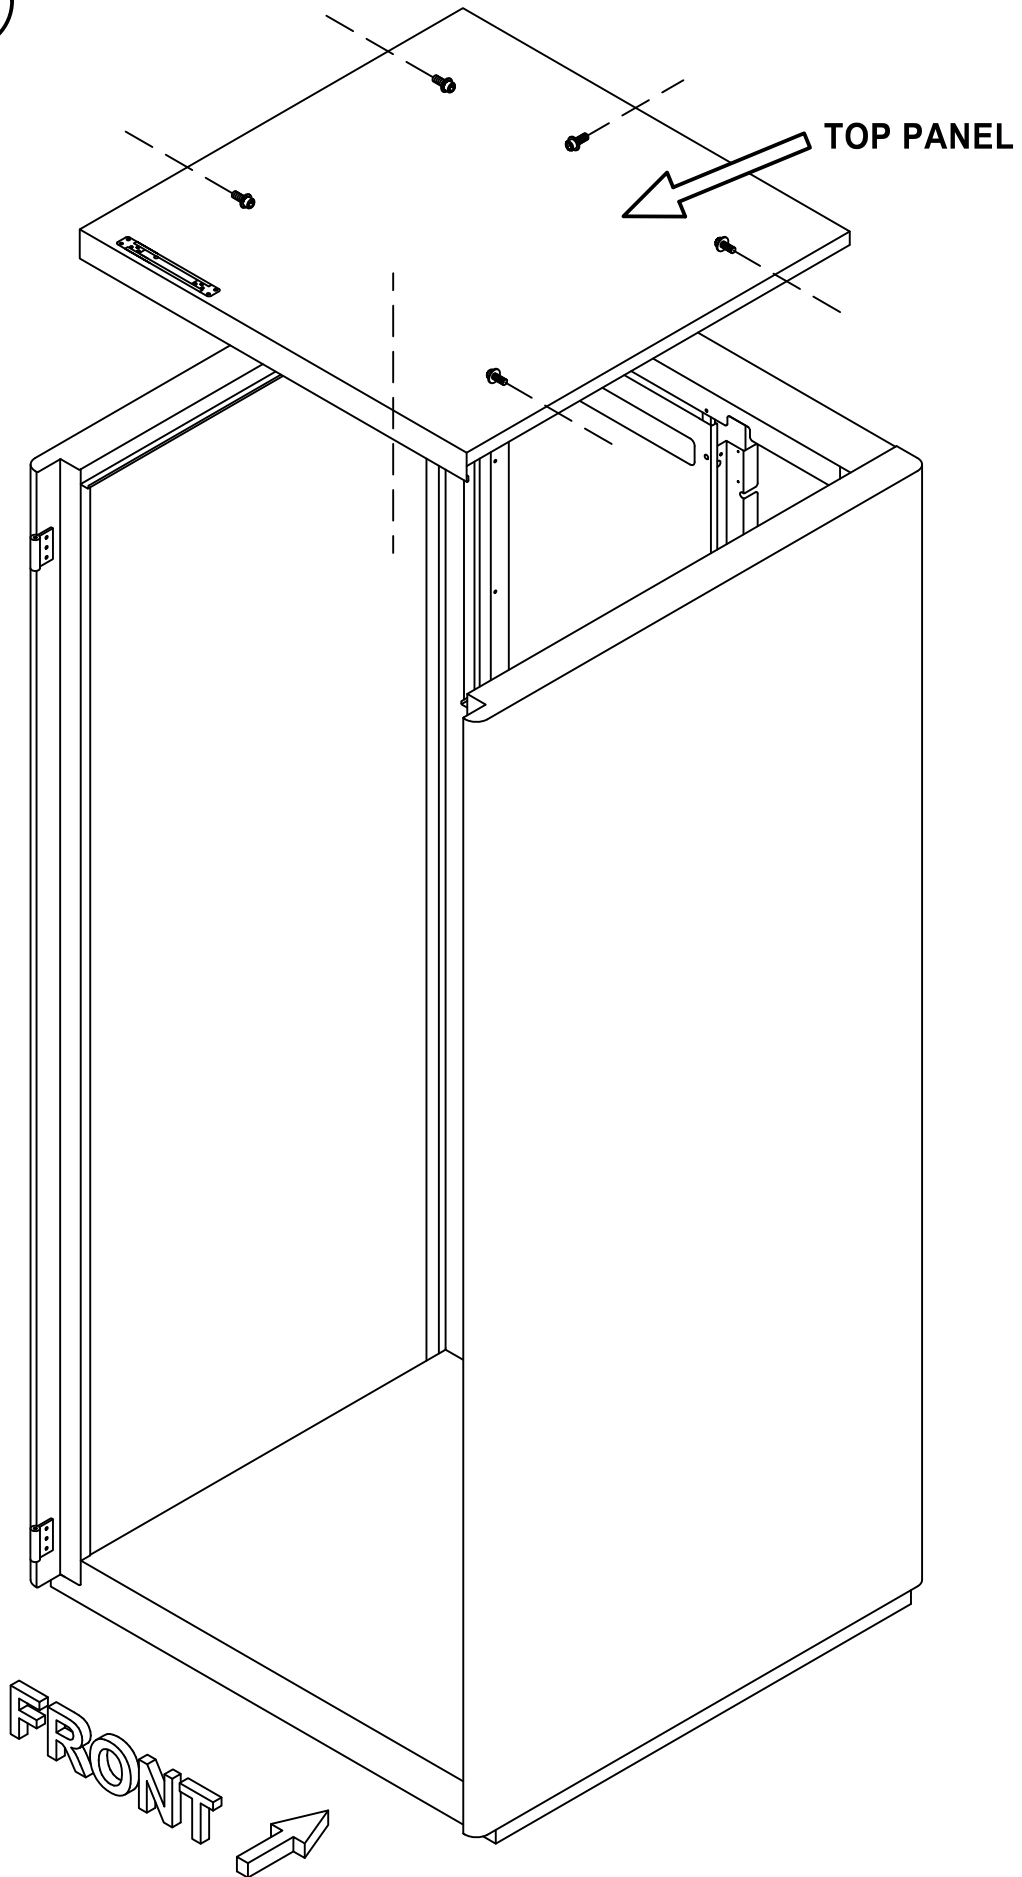
⚠ Do not tighten

DETAIL : (C)

Cap screw with flat washer
(m8 x 20zp)

4

BACK PANEL

FRONT
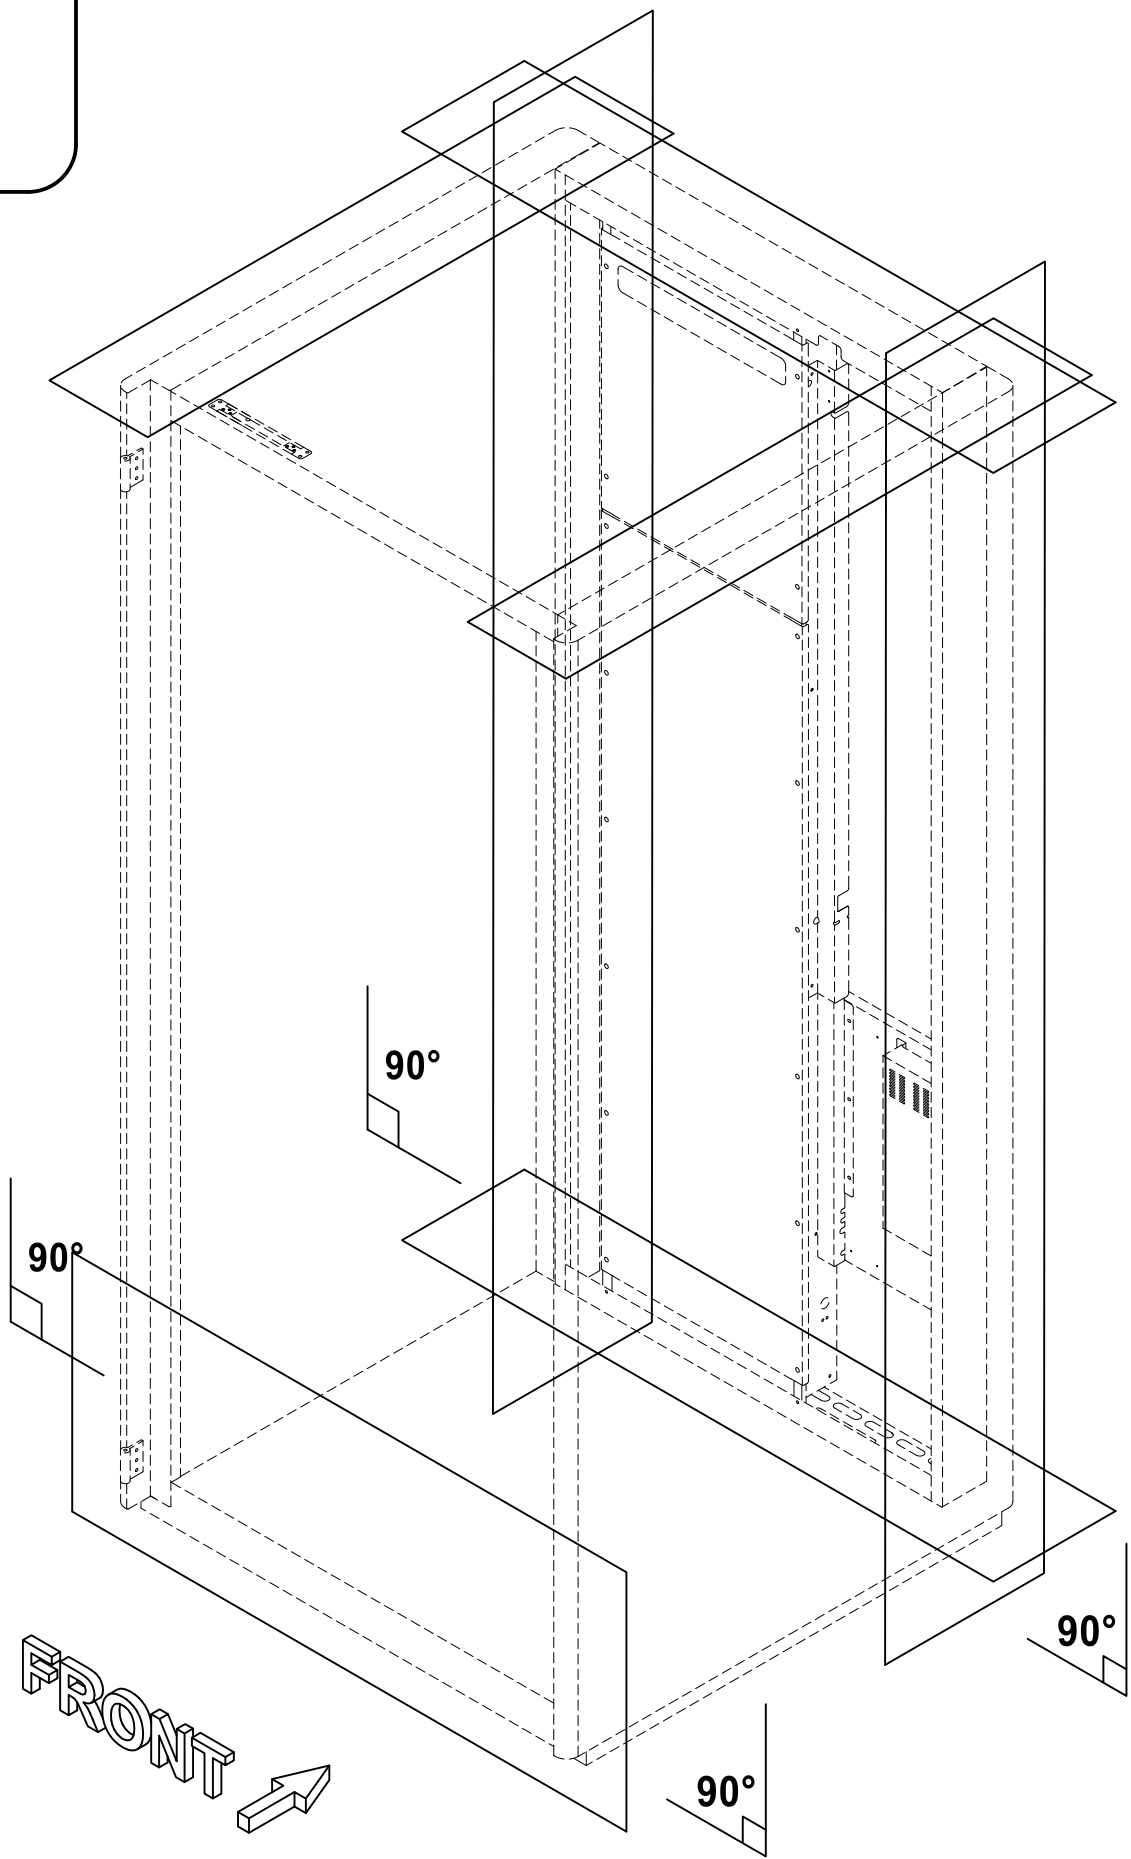
5
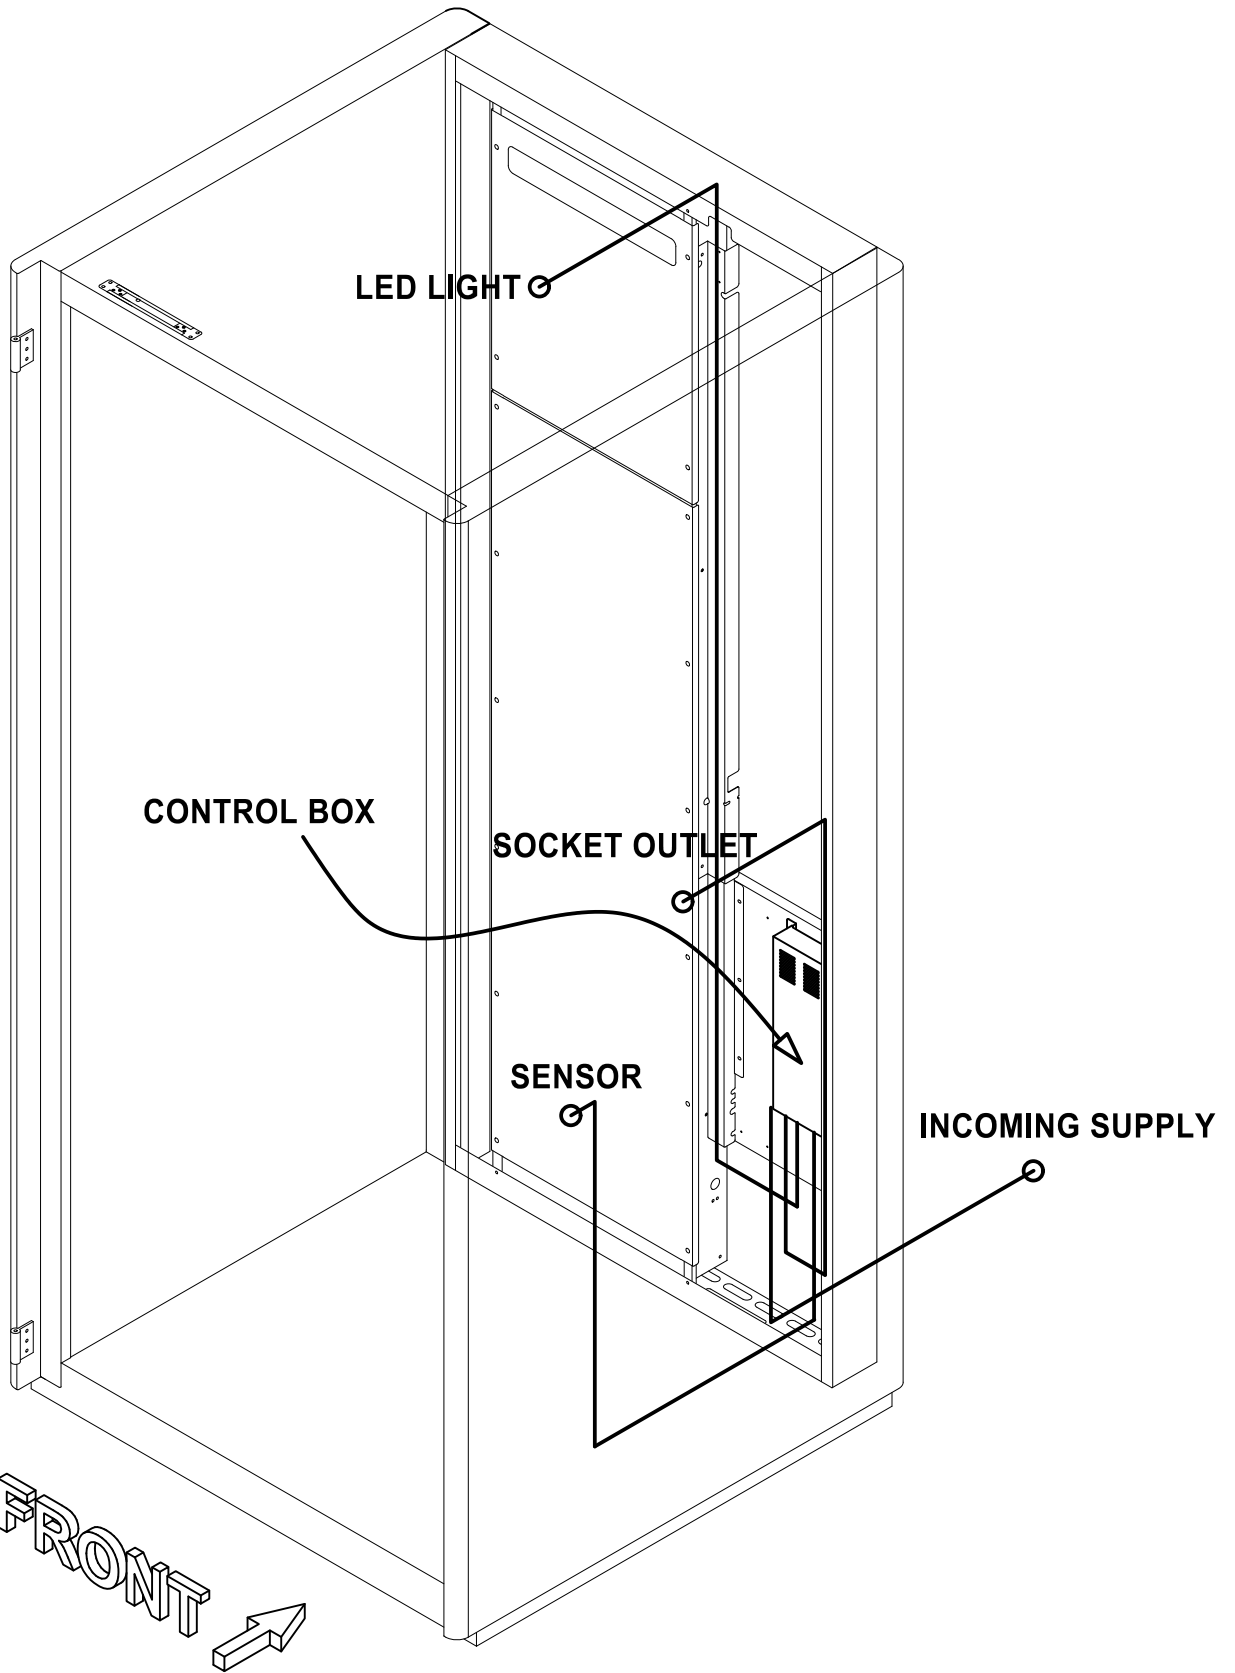
TOP PANEL

FRONT

6

90°

90°

90°

90°

FRONT

⚠️

STEP 1 ▭ Check Leveling

STEP 2 ▭ Tighten all screw to ensure steady structure

7

LED LIGHT

CONTROL BOX

SOCKET OUTLET
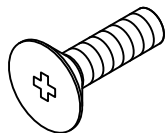
SENSOR

INCOMING SUPPLY

FRONT

8

TOP PANEL INTERNAL COVER
(c/w Acoustic Board)

LEFT PANEL INTERNAL COVER
(c/w Acoustic Board)

③

①

④

FRONT

②

BACK PANEL INTERNAL COVER
(c/w Acoustic Board)

RIGHT PANEL INTERNAL COVER
(c/w Acoustic Board)

9

TABLE TOP

TABLE BRACKET

FRONT

SIDE STEP
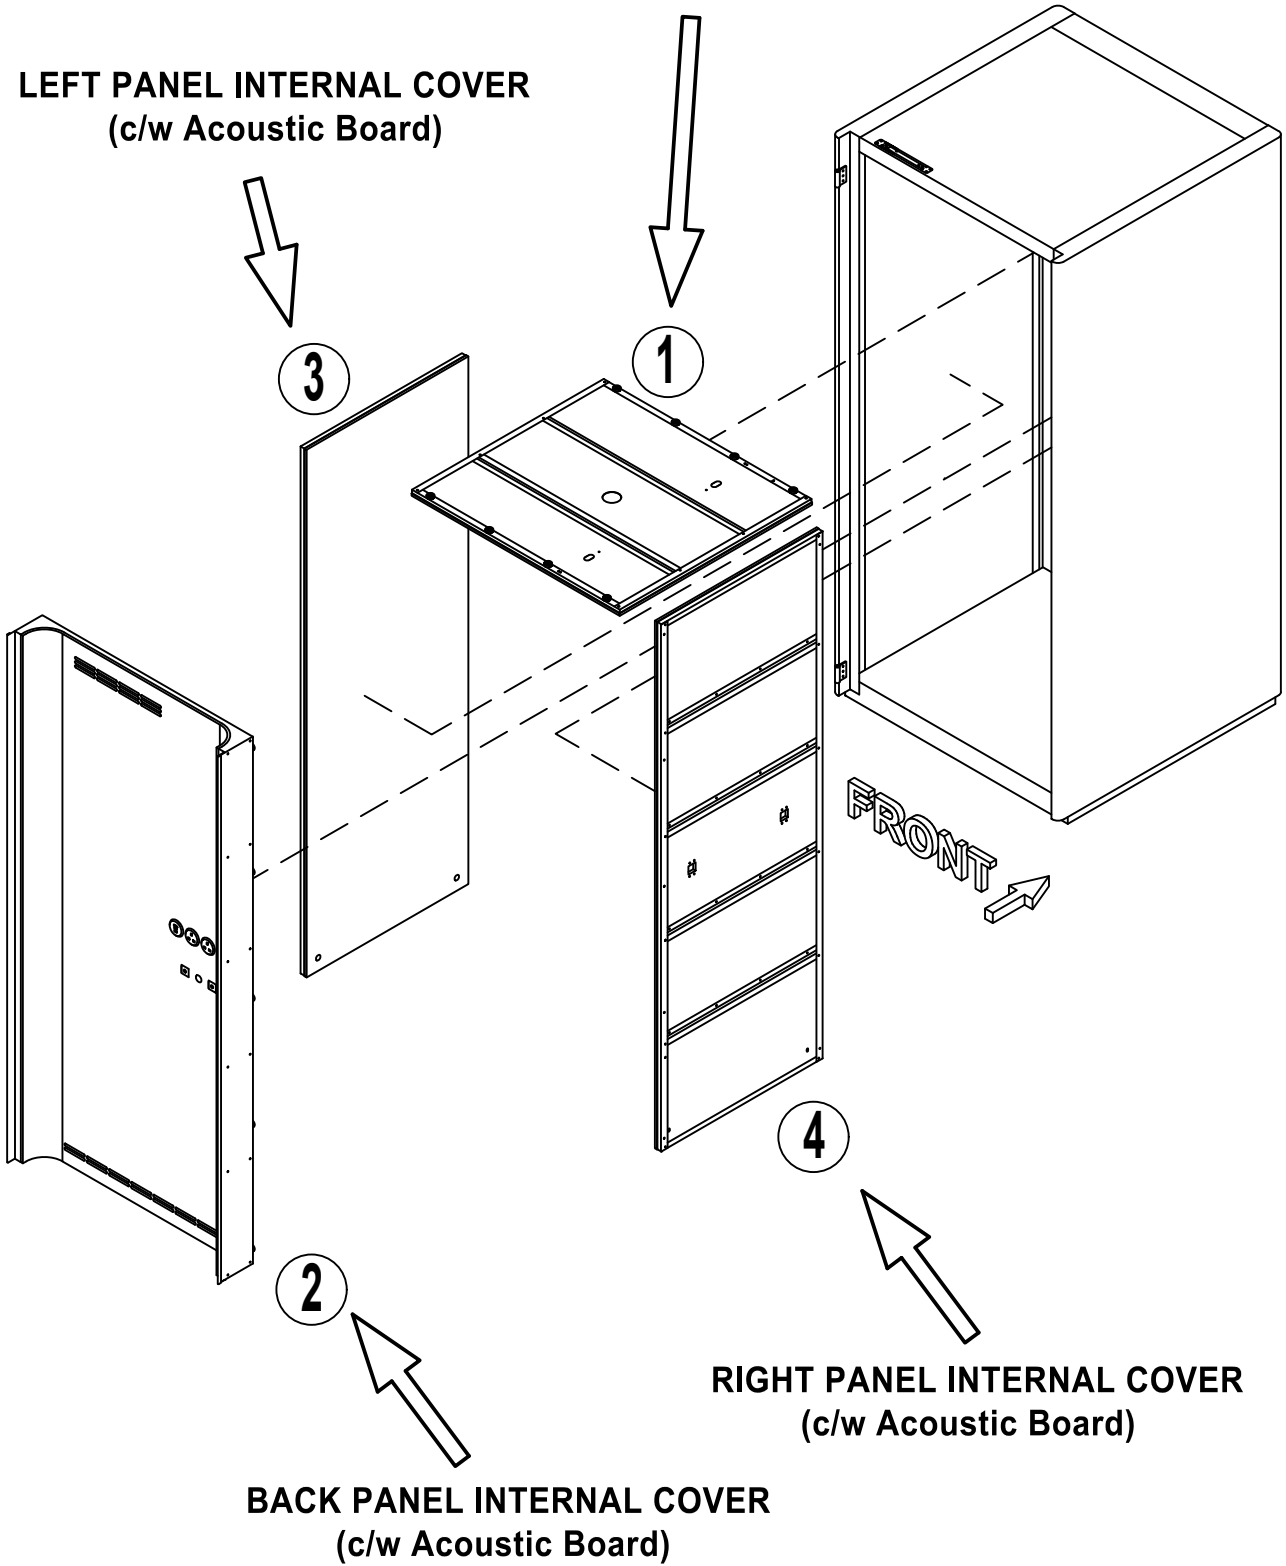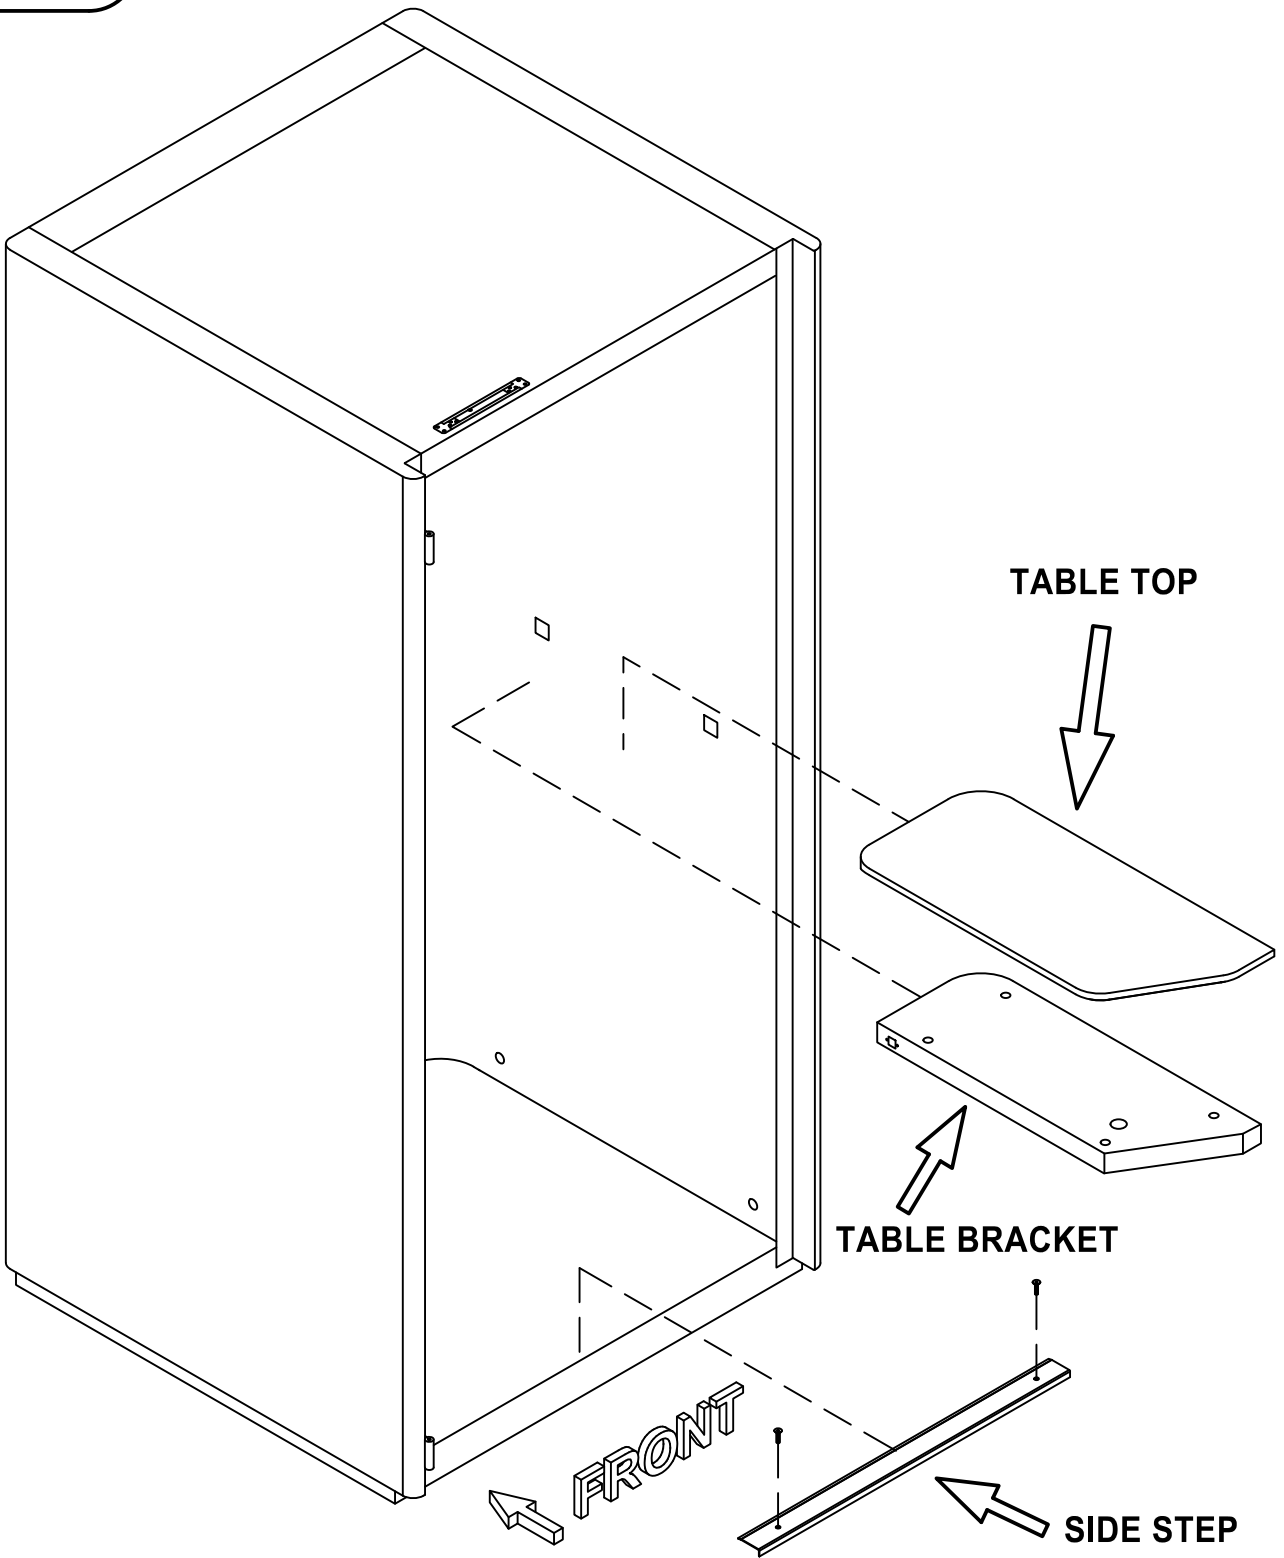
S/S A2 CSK HD MC SCREW
(m5 x 12)
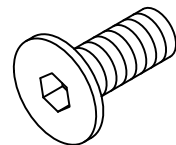
JCBC SCREW
(m6 x 16 ZP)

10
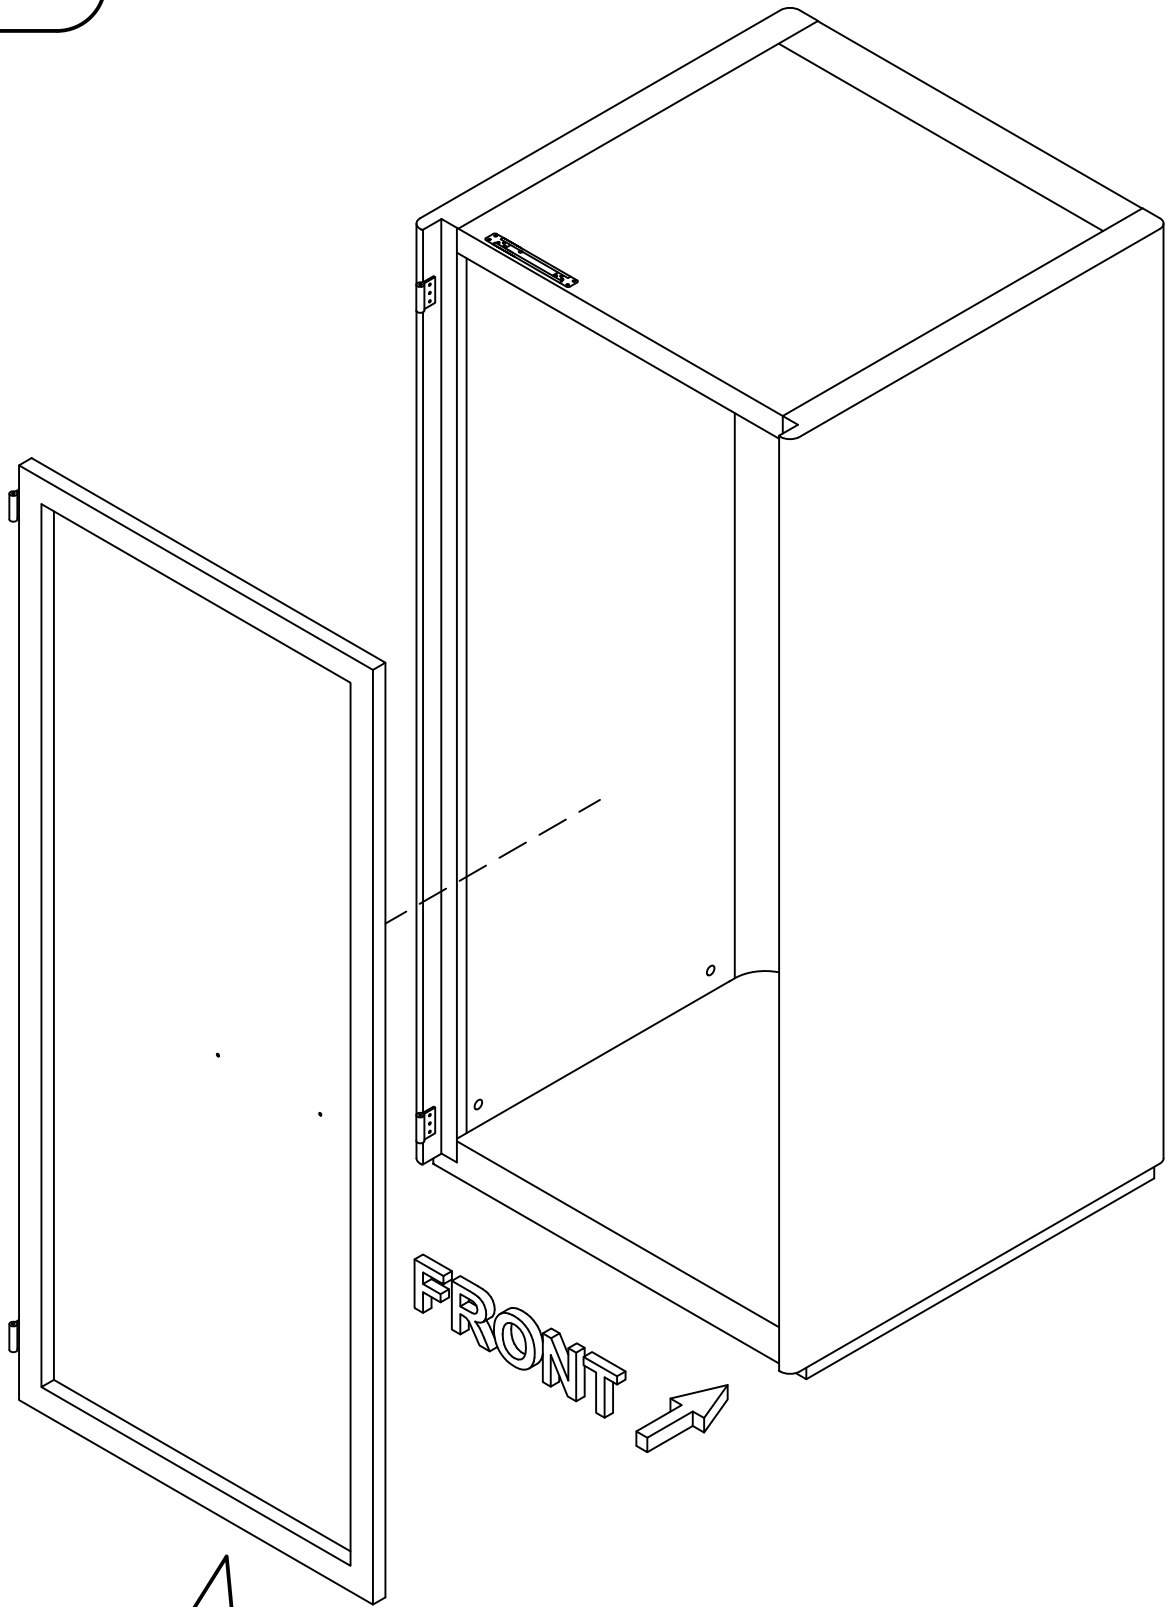
FRONT

GLASS SWING DOOR

11

DETAIL : (E)

CONCEALED DOOR CLOSER

DETAIL : (D)

DOOR HANDLE

FRONT

DETAIL : (E)

DETAIL :D ⊐ Please refer to the provided door handle box.